


**EXPLOSION PROOF AND DUST IGNITION PROOF
 CONTINUOUS DUTY MOTORS
 ELECTRICALLY OPERATED
 MODELS CDPU-4EX, CDPU-5EX, CDPU-7EX, CDPU-10EX**




TECHNICAL SPECIFICATIONS

Models Part #	HP	Volts@60HZ 3 Phase	Electical current	VACUUM	AIRFLOW	VRV SET @	SUCTION ORIFICE Ø
CDPU-4 EX 111000A1	5.5	460	7 A	Over 95" H ₂ O	295/139 CFM	80" H ₂ O	2.5" (64mm)
CDPU-5 EX 111006A1	7.5	460	8.5 A	Over 100" H ₂ O	350/165 CFM	90" H ₂ O	2.5" (64mm)
CDPU-7 EX 111012A1	10	460	11.1 A	Over 110" H ₂ O	400/189 CFM	95" H ₂ O	2.5" (64mm)
CDPU-10 EX 111018A1	15	460	17 A	Over 120" H ₂ O	600/283 CFM	100" H ₂ O	4" (100mm)

OPTIONAL HEPA/ULPA FILTERS

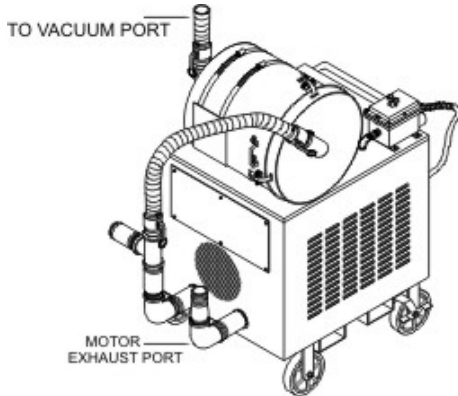

The upstream location of the HEPA/ULPA filter is used when it is necessary to filter contaminated particulates before they will enter into the vacuum suction port thereby avoiding any motor contamination.

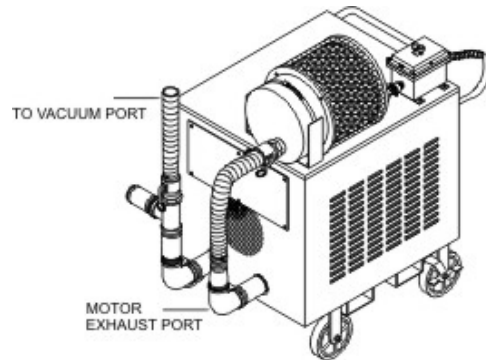

The downstream location of the HEPA/ULPA filter is used when it is necessary to filter contaminated particulates at the exhaust air motor port thereby insuring cleanroom compatibilities.

Toll free telephone: 1 800 668-4437

Toll free fax: 1 800 668-4439

Tiger-Vac Inc. (USA)
 73 S.W. 12 Ave. Bldg.1, Unit 7
 Dania, FL 33004
 USA

Tel.: (954) 925-3625

Fax.: (954) 925-3626

E-mail: sales@tiger-vac.com

Tiger-Vac International Inc.
 2020 Dagenais Blvd. West
 Laval, Quebec
 Canada H7L 5W2

Tel.: (450) 622-0100

Fax.: (450) 625-3388

E-mail: support@tiger-vac.com

Tiger-Vac Europa Srl
 Via Marie Curie 17
 Zona Industriale Ponte Rizzoli
 40064 Ozzano Emilia BO ITALIA

Tel.: 39 333 6529535

Fax.: 39 051 5872904

E-mail: info@tiger-vac.it

Web Site: <http://www.tiger-vac.com>